DIRECTIONS FOR REPLACING ACTUATOR PISTON O-RING

- DO NOT REMOVE ACTUATOR FROM BOAT.
- PUT TABS IN FULL-UP POSITION.
- 3. PRESS TRIM TAB DOWN LEAVING LOWER HINGE ATTACHED TO PISTON SHAFT, AND ATTACH A HOSE CLAMP TO PISTON SHAFT.
- 4. GRASP CYLINDER WITH BOTH HANDS AND TURN TO THE LEFT (COUNTER-CLOCKWISE), UNSCREWING IT FROM UPPER HINGE.
- 5. REMOVE LOWER HINGE FROM PISTON CAREFULLY AS SPRING WILL FORCE PISTON OUT OF THE CYLINDER UNDER 80 LBS. OF PRESSURE POINT PISTON AWAY FROM YOU. (LOOSEN HOSE CLAMP SLOWLY.)
- REMOVE OLD O-RING FROM EXPOSED PISTON HEAD.
- 7. PUT NEW O-RING ON PISTON HEAD IN THE UPPER GROOVE ONLY MAKE SURE IT IS SEATED IN PLACE PROPERLY ON PISTON HEAD.
- 8. PUT PISTON BACK INTO CYLINDER BY COMPRESSING SPRING, AND REATTACH LOWER HINGE. PULL PISTON DOWN 2 IN. AND RE-TIGHTEN HOSE CLAMP TO FIX PISTON IN PLACE. (THIS WILL KEEP SPRING COMPRESSED WHEN RE-ATTACHING UPPER HINGE.)
- 9. SCREW CYLINDER TO THE RIGHT (CLOCKWISE) BACK ON TO UPPER HINGE HAND TIGHT.
- 10. TEST BEFORE PUTTING BOAT BACK IN THE WATER.



For product support, please call **1-866-894-1626 (Option #3)**, or email **BMI_Info@Yamaha-motor.com**. Bennett Marine is a Division of Yamaha Marne Systems Company, Inc. – Learn more at **BennettTrimTabs.com**